


BVM T SAFETY CLAMP

The BVM Type "T" (tubing) Safety Clamp is one of the most valuable tools on the Rig Floor. They are used to guard against dropping flush joint pipe, streamline drill collars, fishing tools, pre-pack gravel liners, wash pipe, etc. The clamp has its own box with a nut wrench and an allen wrench. Manual clamps are equipped with screw and nut combination. The nut secures the clamp around the pipe and should be tightened with the supplied nut wrench. The clamp grips uniformly by design. The individual links give the clamp flexibility to wrap around the pipe and the inserts are spring loaded.

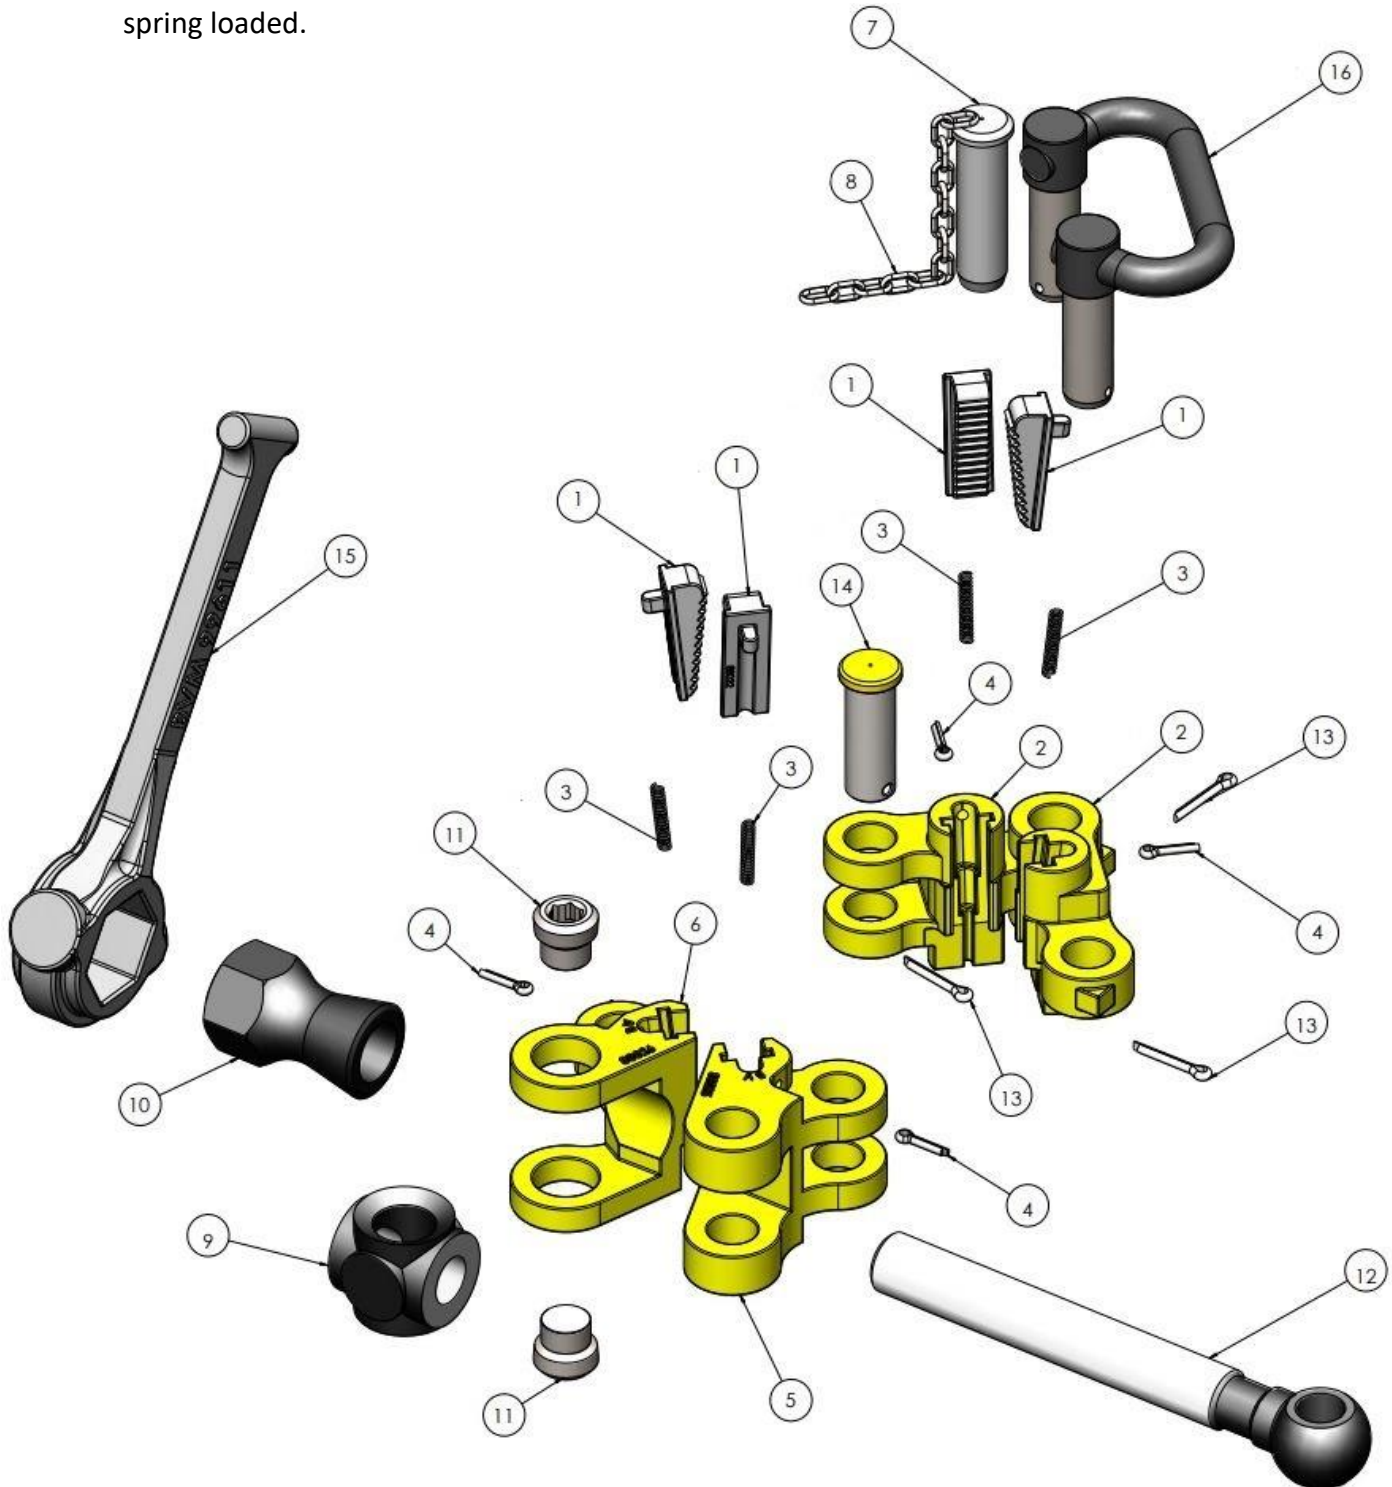

BVM CORPORATION

307 MAGNOLIA BUSINESS PARK DR.
MAGNOLIA, TX 77354; PHONE: 346-296-5501
www.bvmcorp.com; sales@bvmcorp.com

BVM T SAFETY CLAMP

SIZE	P/N	LINKS	WT (LBS)
1 1/8" – 2"	88000	4	36
2 1/8" – 3 1/4"	88001	5	40
3 1/4" – 4 1/2"	88002	6	42
BOX – TYPE T	99612-T	-	42

ITEM NO.	P/N	DESCRIPTION	88000 QTY	88001 QTY	88002 QTY
1	88022	INSERT	4	5	6
2	88021	LINK INTERMEDIATE	2	3	4
3	88024	SPRING FOR INSERT	4	5	6
4	30030-06-0	COTTER PIN	4	5	6
5	88025	END LINK	1	1	1
6	88026	END LINK PIVOT BLOCK	1	1	1
7	99610-1	END LINK PIN	1	1	1
8	99610-2	CHAIN LINK	13	13	13
9	99605	PIVOT BLOCK	1	1	1
10	99606	NUT	1	1	1
11	99614	PIVOT PIN	2	2	2
12	99604	SCREW	1	1	1
13	30030-100	COTTER PIN	3	4	5
14	99607-1	INTERMEDIATE LINK PIN	1	2	3
15	99611	WRECH	1	1	1
16	88027	HANDLE	1	1	1